 


iBELL[®]
Complete Home Solution

CHIMNEY HOOD

Model : IBL ELEGANCE 40K

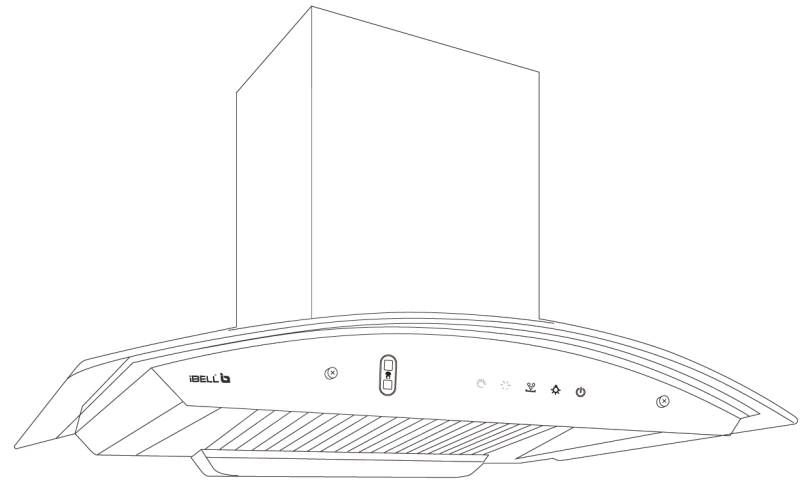

INSTRUCTION MANUAL

Please read manual carefully before using our products

CONTENT

- 1.....Notice
- 2.....Installation
- 3.....Notice of installation
- 4.....Safety Warning
- 5.....Operation

TROUBLESHOOTING

Fault	Cause	Solution
Light on, but fan does not work	The fan blade is jammed.	Switch off the unit and get it repaired by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	Light bulb burn.	Replace the bulb.
	Power cord looses.	Plug in to the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch off the unit and get it repaired by qualified service personnel only.
	The fan motor is not fixed tightly.	Switch off the unit and get it repaired by qualified service personnel only.
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too long distance between the unit and the cooking plane	Readjust the distance to 65-75 cm



ENVIRONMENTAL PROTECTION

Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

*As applicable

 
1. NOTICE

1. Thank you for choosing our cooker hood. Please read the instruction manual carefully before use.
2. The installation must be undertaken by a qualified and competent electrician.
3. The manufacturer disclaims all liability for any damage or injury caused as a result of not following instructions for installation contained in the following text.

The cooker hood is used on 220-240v, 50Hz AC supply.

2. INSTALLATION


1. The cooker hood should be placed at a distance of 65-75cm (26-30inch) from the cooking surface for the best effect. See Pic 1.
2. Install the hook on a suitable place once the installation height is fixed and keep straight.
3. Put the cooker hood on the hook.

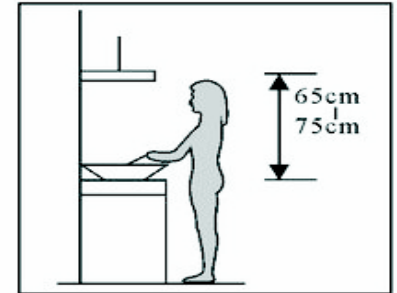

Pic 1

3. NOTICE OF INSTALLATION

 1. Before installation, please ensure the area is clean to avoid suction of debris, bits of wood and dust.
2. It should not share the same air ventilation duct with other appliance such as gas tube, warmer tube, and hot wind tube.
3. The bending of ventilation tube should be $\geq 120^\circ$, parallel or above the start point and should be connected to the external wall.
4. After installation, make sure that the extractor is level to avoid grease collection at one end.

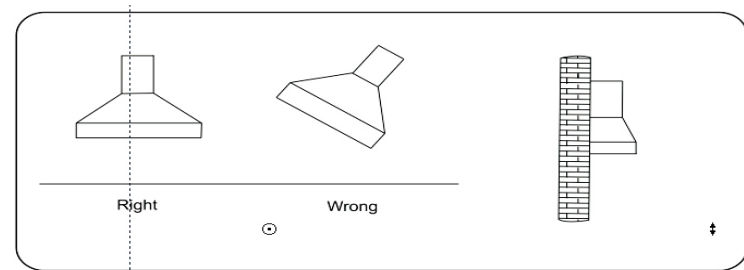

4. SAFETY WARNING

1. Do not allow your children to use the cooker hood, without adult supervision.
2. Your cooker hood is for domestic use only, not suitable for barbecue, restaurant and other commercial use.
3. Any installation work must be carried out by a qualified electrician or competent person.
4. The cooker hood and its filters should be cleaned regularly in order to keep in good working order.
5. Before cleaning, always ensure that you have switched off your cooker hood.
6. Clean the cooker hood according to the instruction manual and safeguard the cooker hood from the danger of burning.
7. Do not use fire/heater for drying your cooker hood.
8. If there is any fault with your cooker hood, please contact the authorized service center.
9. Please keep the room well-ventilated your cooker hood and gas hob are working.
10. The cooker hood outlet must not open into a flue that is used to expel fumes from appliances burning gas or other fuels.
11. Before installation and use of your cooker hood read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on your cooker hood are exactly the same as the voltage (V) and the frequency (Hz) in your home.
12. In order to get the most out of your cooker hood, please read the instruction manual before installing and using and keep it in a safe place.
13. Under ideal conditions, the sound emitted by the cooker hood is 58 dB(A). This may change depending on size of kitchen and other factors like environment, ambient noise, the accessories used, etc.

5. OPERATION



A. Gesture Control Description

Gesture switch:

Connect the components to power, all indicator lights are off after 1 second, it enters shutdown state, the chord sounds once. The system enters the gesture standby state.

Hand wave backward - forward:

1st time - motor runs at low speed

2nd time - motor runs at medium speed

3rd time - motor runs at high speed






4th time - motor stops running, chimney enters shutdown state.

After that if hand wave backward - forward, the above cycle will repeat.

Tips:

When switch on/off range hood with gesture, the hand should be aimed at the sensing area. The best interval time of switching on/off with gesture is about 2 seconds. The best interval distance of gesture control is 5-10cm. (under 4mm glass)

B. Touch Control Description

- I.  **Power / Delay:** Press this button, the range hood is in the standby state. Press again, it is in the shutdown state. When the fan is running, 1 minute delay shutdown works by pressing this button. In the delay state, delay is canceled by pressing this button, it is returned to the shutdown state.
- II.  **Light:** Turn on/off lights by pressing this button.
- III.  **Auto Clean:** Press this button in the standby state, the auto clean works. In the auto clean state, auto clean is canceled by pressing power button or this button. After auto clean for 11 minutes, the range hood is automatically turned off.
- IV.  **Low / Medium Speed:** Press this button in the standby state, the motor runs at medium speed. Press again, the motor runs at low speed. Press again, the motor stops running.
- V.  **High Speed:** Press this button in the standby state, the motor runs at high speed. Press again, the motor stops running.