




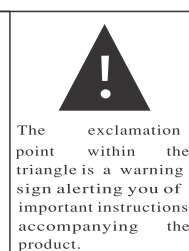

WORLD BAND RECEIVER

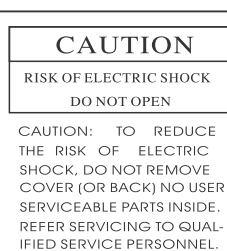

1. TELESCOPIC ANTENNA
2. BAND(FUNCTION) SWITCH
3. TUNING KNOB
4. VOLUME“-”CONTROL (PREV/REW BUTTON)
5. VOLUME“+” CONTROL (NEXT F.F BUTTON)
6. BATTERY COMPARTMENT(BACK)
7. DC 5V IN JACK(BACK)
8. AUX IN JACK (BACK)
9. SOLAR PANEL 5V IN JACK (DC 5V JACK) (BACK)
10. HANDLE
11. CHARGE INDICATOR LIGH (BACK)
12. POWER INDICATOR LIGH (BACK)
13. SPEAKER
14. TF CARD SLOT (BACK)
15. USB SLOT (BACK)
16. PLAY/PUASE BUTTON
17. MODEL BUTTON
18. PHONE BRACKET(PULL)

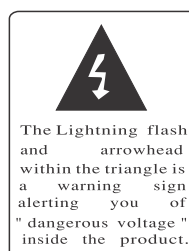

1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2. WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. Attention should be drawn to environmental aspects of battery disposal.

CURRENT 3200mA POWER 12W

THE OPERATING MANUAL

1. Put 18650 battery into battery compartment(6) payin careful attention to the polarity.
2. Turn the Volume control (4) clockwise, the radio can be turned on when you hear the sound of “ bi” , keep on turning this knob to adjust the volume. Turn off the radio by turning the volume control (4) anti-clockwise until you hear the sound of “bi” .
3. Adjust the band selector(2),and then turn the tuning knob(3)to receiver the different programmes from AM/FM/SW1-4.
4. When listen to the programmes from FM,Please pull out the antenna and change the length to make the listening clear.
5. When listen to the programmes from AM please change the radio's position until receiving the best signal.
6. When you dont want to listen to the radio, please turn it off and disconnect the USB power cord or take out the batteries. When you dont want to use the radio for a long time, please take out the batteries from the unite.

USB(TF) PLAYBACK

1. Turn on the power.
2. Set the function selector to USB(TF)
3. Insert a usb flash drive(or a TF card) with MP3 format music, the unit will play automatically. Press pause/play button to hold the playback, press it again to continue the playback. Press repeatbutton to repeat the playing song, press REW button to select the previous song and F.F button to the next song.

BLUETOOTH PLAY INSTRUCTION:

1. Push function switch to USB/TF position;
2. After listening to bulebooth, openmobile blue tooth device to search and connect "FP-BT";
3. After the success of the mobile phone player directy to open the play music.

BUTTON FUNCTION INSTRUCTIONS:

1. In the MP3 state, press the “-” to play the previous song. Long press is to reduce the volume. When the volume is reduced to the minimum, there is a “Di Di” tone.
2. In the MP3 state, pressing the “+” is play the next song. Long press is toincrease the volume , and when the volume is added to the maximum, there is a “Di Di” tone.
3. Press“M” in the MP3 state to convert USB/TF/Bluetooth/AUX IN.
4. Press “Δ” in the MP3 state to play/pause.

NOTE:

1. THIS MODEL INCLUDES BUILT IN RECHARGE ABLE BATTERY
2. IN ORDER TO PROLONG BATTERY LIFE AND PRODUCT NORMAL USE, CHARGING TIME PLEASE KEEP 6-8 HOURS