

Using measure:


1. Please read this instruction before using.
2. Please use the special socket, capacity is not less than 15 A.
3. Put the food in the pot then put the pot at the center of the plate.
4. Choose cooking function: When start the machine, default for hot pot function, press function button to choose the function which you are inquired. Automatic function boiled, soup/porridge, water condition can press "preset" into preset functional status, press "up" and "down", can set function in 24 hours. In manual function, hotpot, stir fry, barbecue state press timer button to enter timer state, press "up" and "down" in three hours can choose any time, also can set the size of the power and temperature.
5. When finished cooking, press on/off button, the plate still have high temperature. Also the indicator keep bright and the fan still working. Please do not touch the plate with your hand until the high temperature light off, then pull out power plug.

Choose pot

The pot material is unrestricted, whether iron, aluminum, copper ceramics, sand pot, heat the instruments that are applicable, if choose other pot, we suggest refer to the following with flat and not reflective is the choice with thermal transfer pot, the heating more effective.


Friendly cookware

Material: iron or stainless steel. Shape: bottom diameter about 18-26cm saucer or bottom size is 12-20cm square pot.

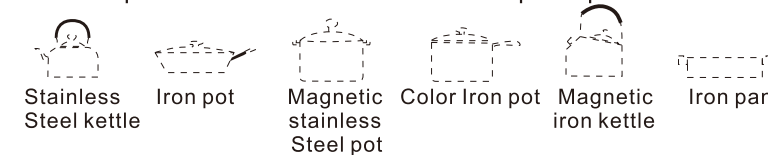

Non-friendly cookware

Material: non-iron metal, ceramic, glass and the bottom is made of cooper or aluminum pot. Shape: bottom uneven, diameter less than 12cm.

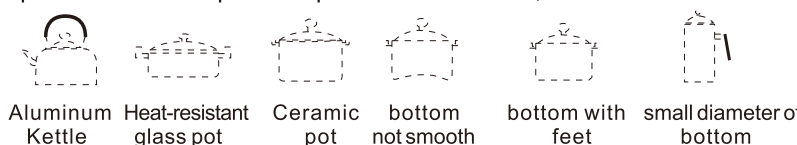

03

Notice

Before using

To prevent electric shocks, short circuit or fire, please note the following matters.

1. Do not open, modified parts or repair infrared cooker by yourself.
2. If the power cord damage or in power plug not strong insert socket, not use light furnace.
3. Please do not bend, binding force of the power supply cord, it will cause damage.
4. Do not make any dust and obstacles attached to this plug or the power line.
5. Do not use wet hand touch the power lines and plug.
6. Do not use the infrared cooker in damp place or near the fire to use.

Using

To prevent scald, please note the following matters:

1. Do not use the cooker on the place where are not smooth.
2. Do not use the cooker in the place where children can reach.
3. Do not use the cooker without pot.
4. Before put the cookware on the plate, please clean the bottom of the pot to prevent any cause burns.
5. Do not use the cooker in the space where is insufficient and can not spread the air well.
6. Do not put plastic containers or paper on the plate when heating.
7. Avoid the plug and plastic products near the cooker when heating.
8. Avoid anything fall down the plate, protect the plate.
9. Please do not blocking inlet and outlet.
10. If the plate surface cracks immediately turn off the machine, unplug plug and sent to maintenance.

After using

To prevent burns and injured or shock, please note the following matters.

1. When finish cooking, the plate still has high temperature, please do not touch the plate by your hand.
2. When finish cooking, do not immediately pull out the plug until the temperature turns down.
3. Do not pull the power line to pull out the plug.
4. After using infrared cooker 15 minutes, pull out the plug. Please do not make the machine is chronically connect electric state.

04

Fault phenomena: Insert the power cord; press the on/off button, the power indicator not bright.	Check: If the plug and socket inserts tight and power socket is in good condition.
Fault phenomena: On/off indicator not bright.	Check: Display or main board is in good condition.
Fault phenomena: When using stops heating suddenly.	Check: If the surrounding temperature is high; If the timer time is reach; system protection function start, please use after 10 minutes, During use, if no operation about 2 hours.
When the power cord damage, please consult specialized after-sale replacement of the same model's power cord.	
Warning with	E1 Check:if the thermocouple is normal
Warning with	E3 Check:if the voltage is over 270v
Warning with	E4 Check:if the voltage is low than 100v
Warning with	E5 Check:if the fan is working

05

6. Protect phenomenon and the code.

Phenomenon	Code
The thermocouple open or short circuit protection	E1
Over-voltage protection	E3
Low-voltage protection	E4
The fan open circuit protection	E5

Instructions

On/Off: Connect the plug into the outlet, when machine will pronounce a BI sound, and the LED lights lit on for 0.5 second, high temperature indicator not bright, under any condition, press on on/off stop working. After the machine stop working. The high temperature indicator will bright until the plate temperature below 60°C.

Timer: In manual function (pot, stir fry, barbecue) state press timing button to enter timing function state, press "increases" and "reduce" in three hours can choose any time needs to be set timing. Long press "increase" and "reduce" can quickly adjust time.

Preset: In automatic function (stew and soup/porridge, boil water hot milk) state press booking button to enter reservation function status, according to "increase" and "reduce" in 24 hours can choose any needs to be set appointments.

Increase: In automatic function, timer, preset function condition, click "up" button can increase set temperature, power and the time value.

Reduce: In automatic function, timer, preset function condition, click "down" button can reduce set temperature, power and the time value.

Remarks: In automatic function (soup, boil water, keep warm), if selected this function does not press "up" or "down" button, the machine will work by automatic program and will according to certain time shutdown. If the selected according to the "up" or "down" button and the machine will according to manually adjust the power has been working and won't automatically adjust the power.

Instructions of infrared cooker with button

1. Connect the plug into the outlet, the indicator light.
2. Adjust spin button to right, when hear "da" means starting, continue to that right rotation, can adjust fire size, and at high temperature emit light.
3. After working, make all buttons left, hear "da" means off, high temperature light still bright, until the temperature of plate below 60°C, then the plug can be pulled out.

Note: Don't empty burn panel by high temperature, lest panel burst.

02

Thank you for using our company infrared cooker, in order to make our products serve you better, please read the instruction carefully before using and carefully preserved to facilitate your future maintenance.

Working Principle

Microcomputer digital light cooker is using advanced technology-halogen tube heating principle.

When infrared cooker switch-on regime, heating element in cooker can supply 500°C----600°C high temperature in seconds. (Induction cooker highest temperature is 300°C) Then gather heat reflective material, together with all the heat coalescence, and reflect off the glass infrared cooking plate, heat conduction from the ceramic glass to the apparatus to achieve the cooking food.


Product Features

Environmental protection---without burning phenomenon, do not produce fireworks and carbon monoxide security---- A number of security devices to ensure safety

Clean---- High hardness of ceramic glass, easy to clean, no residue
Easy---- Functional design of the control panel icons, cooking utensils, to meet the steaming, boiling, frying, grilling, hot pot is a different way of cooking.

Energy---- Microcomputer control, fire, automatic temperature regulation, energy conservation

Product schemes

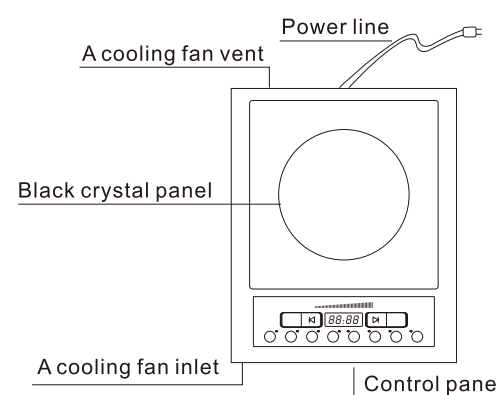

01

Ceramic cooker Introduction

Safety Tips:

1. Plate overheating protection: When the plate reaches 650°C temperature, automatically cooling.
2. Inner overheating protection: When machine inside reaches 100°C, stop heating.
3. Over-voltage protection: When the voltage over 270V, stop heating.
4. Low-voltage: When the voltage below 100V, stop heating.
5. Constant power protection: When the power supply voltage up (in 270V), the output current in decline, the maximum output power decreases with changes.

Cleaning Tip

Before clean please pull off the power cord and confirm the plate already cool.

1. Clean the plate
To remove dirt. Select litmusless detergent.
2. Clean machine body and control panel
To remove dirt. Select litmusless detergent or wet cloth.
3. Do not clean with water directly.
4. Keep the plate and machine body clean, protect any inserts into machine cause a short-circuit.
5. Inlet and outlet surface usable cotton swabs will dirt eliminate.
6. When use infrared cooker after period, if the plate produce spot, is a normal phenomenon, will not effect this machine use.

Warning

If the product changes, the instruction will not be changed. Our company has this manual ultimate explanation.

Cleaning Tip After-sale service

If the machine have any problems, please contact with our service Centre, we will serve for you with all sincerity.

06

iBELL®
IBL CLOUD 040Y

INSTRUCTION MANUAL



2000 W
INDUCTION
COOKER

Read the manual carefully before using the product



iBELL®
www.ibellworld.com

142.5X210MM