

iBELL®

DVD PLAYER
IBL 3288

USER'S MANUAL



iBELL

Technology evolves at an amazing pace, surprising us with gadgets surpassing our imagination. To stay in sync with changing times and present customers with the latest innovations at affordable prices assert the competence of a company. iBell, the consumer durables brand from India, has earned the recognition and trust of millions of customers by presenting them with the newest in home appliances. The brand provides high quality, long-lasting products at favourable prices and effective after-service.

Unlike many other brands iBell has a wide variety of products under its label, ranging from electronics appliances to kitchenware. The brand is further diversifying its product lines in order to serve the overall requirements of a family.

التقنية تتطور تدريجياً بخطوات مدهشة، يعجبنا بأدوات فوق خيالنا. الوقوف
مزامنا مع تغيير الأوقات والعملاء الحديثة مع ابتكارات الحديثة بأسعار معقولة،
وهذه هي تتأكد كفاءة الشركة. آيبيل كعلامة التجارية لأدوات المستهلك من الهند
قد اكتسبت تقدير وثقة مليونيات من العملاء بتقديمهم أحدث لوازم
المنزلية. تتوفر الشركة منتجات عالية الجودة وطويلة المدى بسعر معتدل وخدمات
فعالة بعد البيع.

تتميز شركة آيبيل من علامات تجارية أخرى بسلاسل المنتجات المتنوعة العديدة
تحت علامتها التجارية تتراوح من منتجات إلكترونية إلى لوازم المنزلية. وتتنوع
الشركة خطوط المنتجات لكي تخدم جميع المتطلبات العائلية.

PRODUCT RANGE



GAS STOVE



INDUCTION COOKER



NON STICK ITEMS



KETTLE



FLASK



 
PRESSURE COOKER



CHOODARAPETTY




ENAMEL CASSEROLE

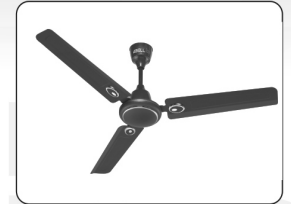

CEILING FAN



 PEDESTAL FAN

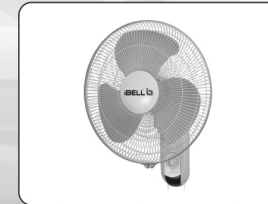

WALL FAN

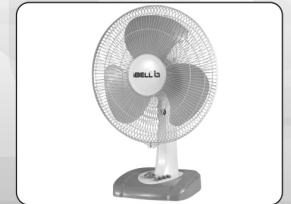 


TABLE FAN



VACUUM CLEANER



HIGH PRESSURE CLEANER

PRODUCT RANGE



MULTIMEDIA SPEAKER



LED TV



TELEVISION



PORTABLE DVD



DVD PLAYER



CAR DVD PLAYER



CAR USB PLAYER



SUB ENCLOSURE



CAR AMPLIFIER



IRON BOX



MIXER GRINDER



SPEAKER



TRIMMER



EMERGENCY LIGHT



LED FLASH LIGHT

Before Use

When using this DVD player, basic precautions should always be followed, including the following:

- 1) Read these instructions
- 2) Keep these instructions
- 3) Heed all warnings
- 4) Follow all instructions
- 5) Do not use this apparatus near water
- 6) Clean only with dry cloth
- 7) Do not block any ventilation opening
- 8) Do not install near any heat sources such as radiators , hear ,registers ,stoves, or other apparatus (including amplifiers)that produce heat.
- 9) Do not defect the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other .The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart ,stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, dose not operate normally, or has been dropped.
- 16) Power does not completely shut-off when the power switch is on off position. to completely shut-off power from the unit. pull the plug from the AC outlet. Pull plug from AC outlet when leaving the unit unused over a long period of time(a day or more). keeping the power on with the unit unattended over long periods makes it a potential fire hazard.

SAVE THESE INSTRUCTIONS



CONTENT

Table of Content 1

Important Safety and Function Instructions 2

Panel Instruction 3

Brief Instruction of Controls

 1. Remote Control..... 4

Connections

 1. Preparations 4

 2. System Connection 5

Basic operations

 1. Turn on the TV and your DVD player 6

 2. Place A Disc 6

 3. Place A Disc 6

 A) Menu Play 6

 B) Title Play 6

 C) Sequence Play 6

 D) Program Play 6

 4. Selecting Tracks 7

 5. Skipping Tracks 7

 6. Multi speed Fast Motion Playback 7

 7. Multi speed Slow Motion Playback..... 7

 8. Using the Repeat Feature 8

 9. Using the Display Feature 8

 10. Using the Search Feature 8

 11. Changing the Audio Language 8

 12. Subtitles 8

 13. Changing the Camera Angle 9

 14. Changing the TV System 9

 15. Mute the audio output 9

 16. Zoom In the video image 9

 17. Changing the Soundtrack 9

 18. Repeat a specific Segment on the disc that you define 9

 19. Volume Control 10

 20. Playing WMA,MP3,JPEG discs 10

System Setup

 1. General steps of Setup Menu 11

 2. Setup Items Instruction 11

 A) System Setup 11

 B) Language Setup 12

 C) Audio Setup 13

 D) Video Setup 13

 E) Speaker Setup 14

Trouble Shooting 15

Technical Specification 16

CUSTOMER COPY

Mr./Mrs./MS-

Address -

.....

Telephone NO - Mobile NO-

Model NO -

Serrel NO-

Date of Purchase-

Cash Memo no - Cash Memo Date -

Dealer Name and Address -

.....

Dealer Stamp-

.....

-----Cut Here-----

Service Center Copy

Mr./Mrs./MS-

 Frist Name Middle Name Last Name

Address -

.....

Pin Code -

Telephone NO - Mobile NO-

Model NO -

Serrel NO-

Date of Purchase-

Cash Memo no - Cash Memo Date -



DVD Warranty Terms & Conditions

Dear Customer,

Thank you for purchasing iBell DVD. Your iBell DVD is under warranty in accordance with terms and conditions stated herein. If you need our service please call our service center.

- Your units and components contained therein are warranted against defective material and workmanship for a period of 12 months from the date of purchase.
- To obtain warranty protection, notice of alleged defect must be given promptly upon discovery and warranty card must be presented alongwith proof of date of purchase to our service personnel at the time of service.
- The companys decision on identification of the defects due to faulty / defective spare parts or faulty workmanship or misuse / abuse shall be final and you shall agree to abide by such decision.
- The defective parts / material shall be replaced with a functionally working equivalent part / material and defective part / material will become the property of the company.
- Free after sales service under the warranty period shall be available with in municipal limits of the city / town where the authorized service station located.
- In case DVD required to be taken to the workshop of the company for any repairs in compliance with warranty, the company representative shall advice accordingly and customer would be required to make arrangements to send it to nearest service center at his cost & risk.








Limitations of warranty

- Damage resulting from accidents, misuse, abuse, alteration, act of God, tempering or failure of the purchaser to follow the normal operating procedures outlined in user manual.
- Defect of damage due to spillage of liquids or wrong use of electrical supply and voltage.
- Normal wear and tear, corrosion, rusting or stains.
- Scratches and damage to outer surface areas and externally exposed units or parts that are due to normal customer use.
- General maintenance and routine service.
- Claim for damaged / missing parts after seven days from the original date of purchase.
- If any part or parts of the unit are replaced with a part or parts not supplied or approved by company or unit has been dismantled or repaired by any person other than iBell authorized technician
- Products which has serial number removed or tempered.
- Products, which are used for commercial purposes.
- If the warranty card is being altered, defaced or erased in any manner whatsoever.

Note: For all type of repairs / maintenance under warranty, the appliance shall be brought to the nearest company service center or its authorized service agent.

Important Safety and Function Instructions

TO REDUCE THE RISK OF FIRES AND ELECTRIC SHOCKS,DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

	<p>CAUTION: To reduce the risk of fire and electric shock, do not remove the cover (or back) of the unit. Refer servicing only to qualified service personnel.</p>
	<p>This lightning flash arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>The exclamation point within an equilateral triangle is intended to alert use to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
	<p>Caution: Please put DVD player power socket positioned near DVD player which is easily installed. When DVD player failed to work normally or any fire caused, DVD player power plug can be easily pulled out from power socket.</p>
	<p>The marking of products using lasers. The marking will be shown at the rear panel of the unit, means the unit have been classified as Class1,and is utilizing laser beams that are of weaker class. There is no danger of hazardous radiation outside the unit.</p>
	<p>Invisible laser radiation when open and interlock failed or defeated avoid direct exposure to laser beam.</p>
	<p>The symbol for CLASS II (Double Insulation).</p>

SELECT A DVD DISC

DVD discs and DVD players are manufactured under the worldwide agreed DVD Regional Code System that the player will operate only with corresponding disc of the same Regional Code.

DVD Regional Code:

Regional Code	Region
1	Canada, USA
2	Europe(incl. Poland, Romania, The Czech republic),Japan, Middle East (incl. Saudi Arabia, Egypt, Iran ,south Africa)
3	East Asia (incl. Hongkong , Taiwan, South Korea),South-East Asia.
4	Australia, Caribbean, Central & South America Mexico, New Zealand
5	Africa, Former Soviet Union, India, North Korea, Pakistan, Turkmenistan
6	China

PANEL

FRONT PANEL

 


- 1. TRAY
- 2. OPEN/CLOSE
- 3. PLAY/PAUSE
- 4. STOP

- 5. POWER
- 6. PREV
- 7. NEXT
- 8. MIC1

- 9. MIC2
- 10.USB

REAR PANEL OUTPUT

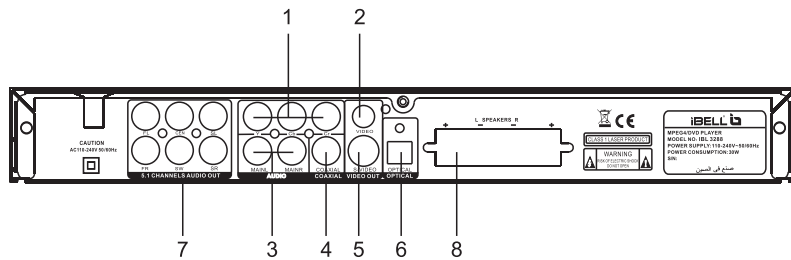

- 1. Y,Cb,Cr(YUV) Output
- 2. Video Output
- 3. Audio Output
- 4. Coaxial Output

- 5. S-Video Output
- 6. Optical Output
- 7. 5.1 Channel Output
- 8. Speaker Socket

Technical Specification

Play mode	NTSC/PAL/AUTO
Disc mode	DVD,VCD,CD,SVCD,MP3,DVD-R,CD-R,CD-RW,JPEG,WMA,MP4
Video characteristic	
Resolution	≥500 lines
Video S/N ratio	≥56dB
Audio characteristic	
Frequency response	fs 192KHz:4Hz-44KHz:+/-1dB
Audio S/N ratio	≥90dB
Dynamic range	≥90dB
Distortion	<0.01%
D/A converter	192KHz/24bit
Output characteristic	
Video output	1Vp-p(75Ω)
S-Video output	Y:1Vp-p(75Ω) C:0.3Vp-p(75Ω)
Audio output	2.0V± ^{0.0V} / _{1.0V}
AC-3	5.1 CHANNEL OUTPUT
Power Voltage	~110V-240V 50/60Hz
Power consumption	≤30W

Specifications are subject to change without notice.


Trouble Shooting

When there is a problem it does not mean malfunction before sending for repair, Please check your device according to the following . Under no circumstances should you attempt to repair the system yourself; this will invalidate the warranty.

Symptom	Remedy
No Power	<ul style="list-style-type: none"> • Make sure power cord is properly connected. • Check if there is power at the AC by outlet by plugging in another appliance.
No Picture	<ul style="list-style-type: none"> • Check the TV is switch on. • check the video connection. • Check the appropriate video input mode on the TV receive the another DVD signal.
Unable to start playback	<ul style="list-style-type: none"> • If no disc insert, Please insert the disc. • Insert the play able disc as like the disc type, regional code match the DVD player. • Ensure the disc label is facing up. • Clean the disc. • Check if the disc is defective by trying another disc. • Check to see if the disc is defective, badly scratched or warped(not flat).
Picture poor	<ul style="list-style-type: none"> • Clean the disc is finger print or dirty, with a soft cloth, wiping from the center to the edge in a straight line
No sound	<ul style="list-style-type: none"> • Check the audio connection. • Select the correct input mode of the audio receiver.
The remote control does not work properly	<ul style="list-style-type: none"> • Point the remote control at the remote sensor of the DVD player. • Operate the remote control within about 23ft(7m) • Inspect or replace the batteries.
Wired Microphone unable to produce voice	<ul style="list-style-type: none"> • Adjust the microphone volume to suitable volume. • Turn on the microphone.
Player does not respond to some operating commands	<ul style="list-style-type: none"> • Operations may not be permitted by the disc
Player can not close the tray	<ul style="list-style-type: none"> • Please place the disc again on the center of the tray.
Player can not open the tray	<ul style="list-style-type: none"> • If the tray is locked by obstacle or disc, please use the thin stick into Emergency Opening Hole and move the inside bar on the bottom of the player manually.

Remote control

 REMOTE CONTROL

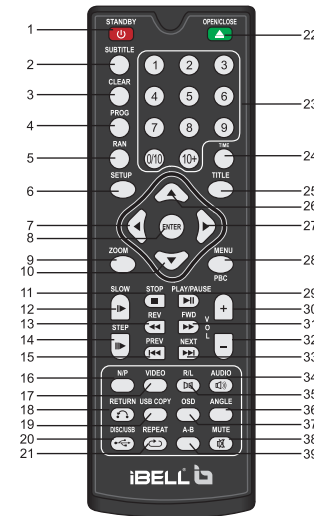

Function


- | | |
|--------------|---------------------|
| 1. STANDBY | 21. REPEAT |
| 2. SUBTITLE | 22. OPEN/CLOSE |
| 3. CLEAR | 23. NUMERIC BUTTONS |
| 4. PROG | 24. TIME |
| 5. RAN | 25. TITLE |
| 6. SETUP | 26. UP |
| 7. LEFT | 27. RIGHT |
| 8. ENTER | 28. MENU/PBC |
| 9. ZOOM | 29. PLAY/PAUSE |
| 10. DOWN | 30. VOL+ |
| 11. STOP | 31. FWD |
| 12. SLOW | 32. VOL- |
| 13. REV | 33. NEXT |
| 14. STEP | 34. AUDIO |
| 15. PREV | 35. R/L |
| 16. N/P | 36. ANGLE |
| 17. VIDEO | 37. OSD |
| 18. RETURN | 38. MUTE |
| 19. USB COPY | 39. A-B |
| 20. DISC/USB | |

* OSD SWITCH:

When disc is being played, the OSD button on the remote can be used to switch the screen display modes--press OSD button, then display will show music track number of the present playing file and press it again, it will switch back to time of the present playing track.

Loading Battery

 1. Open the cover.
2. Insert battery.
Make sure to match the + and - on the battery to the marks inside the battery compartment.
3. Close the cover.



Notes on battery

- Pls take out the insulated plastic piece, when you use the remote first time.
- Do not insert battery into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the battery. Do not throw battery into a fire.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all battery with new ones.
- Improper replacement of battery may result in explosive hazard. It will be replaced only by battery with the same or equivalent type.

Operating With The Remote Control

With about 7m (23 feet)



Distance: About 7m (23 feet) from the front of the remote sensor.
Angle: About 30° in each direction of the front of the remote sensor.

 
Dot not expose the remote sensor of the DVD player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD player via the remote control.

Notes on the remote control


- Direct the remote control at the remote sensor of the DVD player.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.

System connection


Connecting to a TV with Audio/Video cable

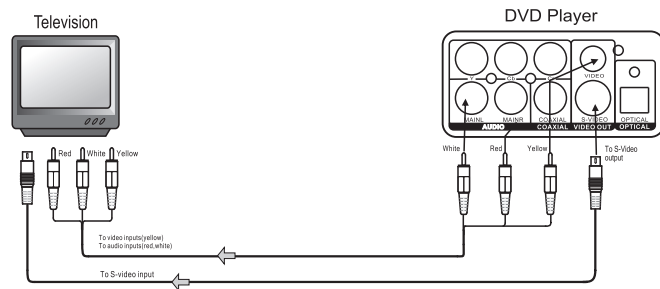

 Connecting to a audio system and TV equipped with YUV Video input

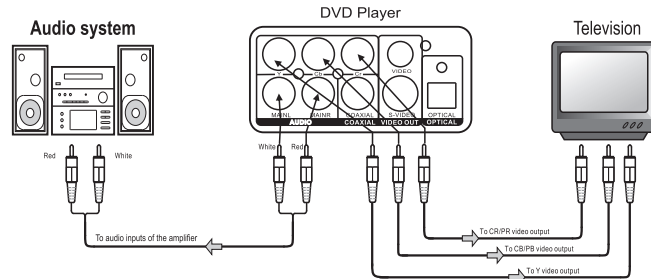

 Connecting to an amplifier equipped with 5.1ch audio input and TV

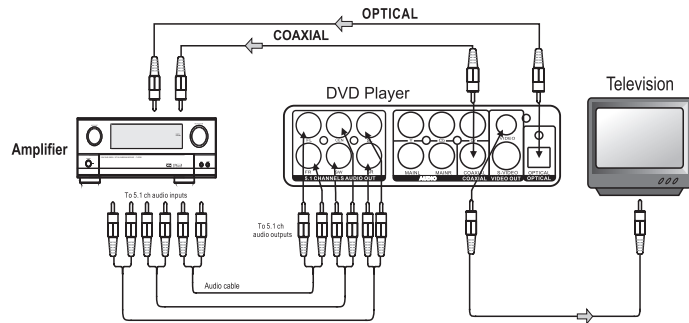

System setup

 
SPEAKER SETUP

The speaker setup options are illustrated below:

▼ DOWNMIX


Use the \blacktriangle \blacktriangledown buttons to move the adjust the scroll and adjust the saturation.

- LT/RT: Choose this setting, it will be sound like in a move theatre if the original move the disc was recorded from was encoded in the Pro Dolby Digital format.
- STEREO: Choose this setting, when 5.1-channel sound playing, two channels of signals will be output from the left and right soundtrack; when 2-channel sound playing, stereo signal will be output.
- VSS: Choose this setting, when a disc recorded with 5.1-channel sound format playing the fictitious surround soundtracks effect will be heard from the main soundtrack.
- 5.1CH: Choose this setting to output the 5.1-channel sound.

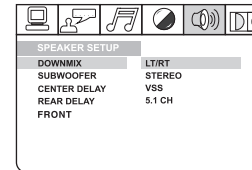


▼ SUBWOOFER

 Set subwoofer speakers ON or OFF.

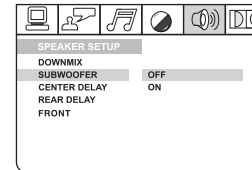


▼ CENTER DELAY

 Set center speakers volume 4MS, 2MS or large.

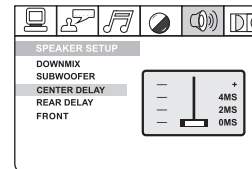


▼ REAR DELAY

 Set rear speakers volume 12MS, 6MS or large.

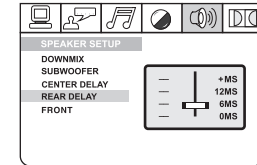


▼ Front Speaker

 Set Front Speaker large or Small.

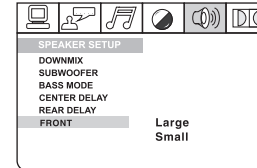


DIGITAL SETUP

 
▼ OP MODE

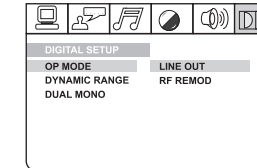

▼ DYNAMIC RANGE

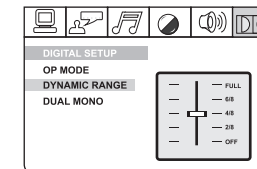 


▼ DYNAMIC RANGE

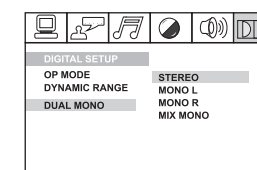 


System setup

 
- ▼ **KEY**
Use the **UP** and **DOWN** buttons to set the key.

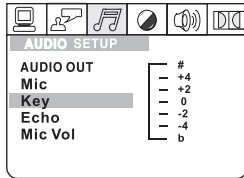

 
- ▼ **ECHO**
Use the **UP** and **DOWN** buttons to set the echo.

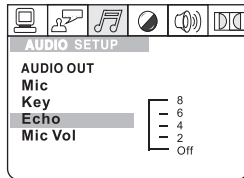

 
- ▼ **Mic Vol**
Use the **UP** and **DOWN** buttons to adjust Mic volume.

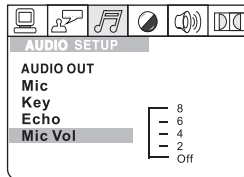

 
- ▼ **BRIGHTNESS**
Use the **▲** **▼** buttons to move the adjust the scroll and adjust the brightness.

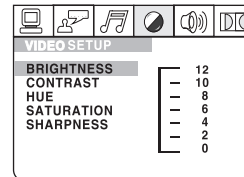

 
- ▼ **CONTRAST**
Use the **▲** **▼** buttons to move the adjust the scroll and adjust the contrast.

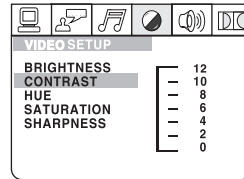

 
- ▼ **HUE**
Use the **▲** **▼** buttons to move the adjust the scroll and adjust the hue.

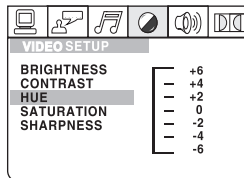

 - ▼ **SATURATION**
Use the **▲** **▼** buttons to move the adjust the scroll and adjust the saturation.

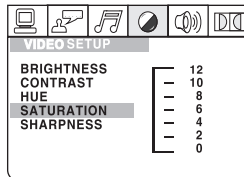

 - ▼ **VIDEO SHARPNESS SETUP**
Use this option to adjust level of sharpness by using the button **↔** on your controller.

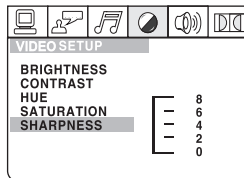

Basic operations

1. Turn On the TV and your DVD Player

- Press the **Power** button on the DVD player or the remote controller, and "Read" appears on the TV screen.



- If there hasn't a disc in the DVD Player



2. Place A Disc

- Press the **OPEN/CLOSE** button on the DVD Player or the remote controller, and "OPEN" appears on the TV screen.



- Place a disc in the DVD Player and Press **OPEN/CLOSE** button, the "CLOSE" appears on the TV screen. then the disc starts playing automatically.



3. Play A Disc

- The contents of each disc menu vary according to how the disc was authored and what features are included. The disc menu will be turned on for you to select. When Menu pressed, play and pause can be switched with the **PAUSE** button on the remote. Functions, such as menu play, title play, sequence play etc.

A) Menu play

- Press **MENU** Button
 - TV screen display the DVD Root Menu when a DVD disc is loaded.
 - When a SVCD or VCD2.0 disc is loaded, the menu will displayed on the screen (when PBC) is off) (At this moment, press **PBC** button once to display current PBC state).
 - **PBC** is initialized on when a SVCD or VCD 2.0 disc is loaded.

- when a DVD disc is loaded, you can press **◀▶** **▼** buttons to highlight the menu item you want to choose: As SVCD or VCD 2.0 you can press **Numeric** buttons to select a track to play.
- Press **ENTER** or **PLAY** button, you can begin play with the highlight.
- Return when playing: When a DVD disc is playing, press **MENU** button, and you can return to Root Menu; As SVCD or VCD2.0, and **PBC** is on, press Return button you can return to the menu.
- Stop
 - When you press **STOP** button for the first time the player turns into quasi stop state. At the same time the OSD appears "Pre-Stop". To begin the title over, press **STOP** button twice.



- In quasi stop state, the player remembers where you start playing the disc again, the DVD player picked up where you left off.
- In stop state, where you press **PLAY**, the player enters sequence playback mode.

B) Title Play (compatible with DVD discs only)

- During DVD playback, press **TITLE** button to display the DVD title content.
- Press the **◀▶** **▼** buttons to highlight the title you want to choose, and press **ENTER** button. Also you can press numeric button to choose.
- The DVD player begins with the chapter 1 of the chosen title.

 
C) Sequence Play

- When a SVCD or VCD 2.0 disc is loaded and **PBC** is on, once **PBC** button pressed, **PBC** switches off. Then the player can play in sequence playback mode; when **PBC** button pressed twice, **PBC** switches on.
- Except for SVCD or VCD discs, in the stop state, when press **PLAY** button, the player then enters sequence playback mode; this feature is effective to all the compatible discs.

D) Program Play


The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.

- Program Mune: DVD, MP3/JPEG discs:

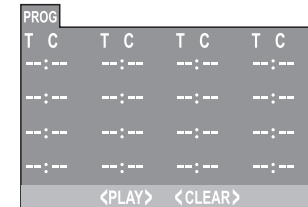

Basic operations

 SVCD/VCD/CD/HD-CD discs:

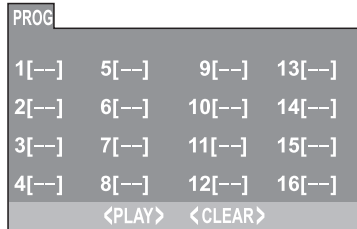

+ If PBC is on, this operation will turn PBC off while the chapters/tracks plays in programmed order.

- According to the highlight, use the **Numerics** buttons to enter the chapters/tracks in the order you want them to play. Then press **PLAY** or use **◀▶▶▶** buttons to highlight the **PLAY** item and press **ENTER**. The chapters/ tracks will play in the programmed order.

+ You can program maximum 16 title/chapters.

- According to the Direction Indicator on the menu, you can press **◀▶▶▶** buttons to highlight where you want to enter.
- During Program Playback, if **PROGAM** button pressed, the programmed order and the contents will be displayed on the screen, and the program playback will be stopped. Also you can press **STOP** and **PLAY** to resume normal playback.

Notes:

+ To clear the programmed order, use **◀▶▶▶** buttons to highlight the "clear" item, then press **ENTER** button.

+ To modify the programmed order, use **▶▶▶▶** buttons to highlight the modifying item and enter the new chapter/track you want to program directly.

4. Selecting Tracks

- When playing a DVD disc, press Numeric buttons on menu or title page to select track: During DVD Playback, you can input desired title number directly.
- As a SVCD or VCD disc, during sequence playback, press **Numeric** buttons to select Tracks. (During program playback and PBC is on, you can only press **PREV**/**NEXT** button to select).
- As for MP3/JPEG disc, press Numeric buttons to select different track on current track list.

Notes:

To select tracks from 1-10, press corresponding numeric buttons (1-9,10).

 
To select track above 10, press 10+, then to press 1-10 buttons.

5. Skipping Tracks

- Press **NEXT** button to beginning of the next title/chapter/track on a disc.




- Press **PREV** button to beginning of the preceding title/chapter/track on a disc.

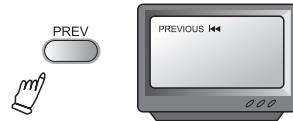


6. Multi speed Fast Motion Playback

 - Press **FWD** key to get 2X, 4X, 8X, 20X, normal play circular fast forward function of disc playing.

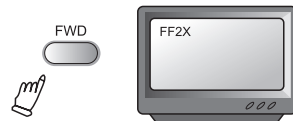

 - Press **REV** key to get 2X, 4X, 8X, 20X, normal play circular fast Reverse function of disc playing.

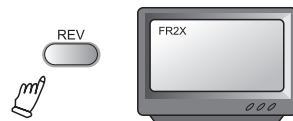

- Press **PLAY** button to resume or playback, during CD, HD, MP3 playback, the player has audio output.

 
7. Multi speed Slow Motion Playback

- Press **SLOW** button when pictures moving you can enter slow motion playback mode, slow motion playback has six speeds; 1/2, 1/3, 1/4, 1/5, 1/6, 1/7.
- Press **PLAY** button to resume normal playback.

System setup

♥ DEFAULT


Choose this option to resume all the setup options to default settings.

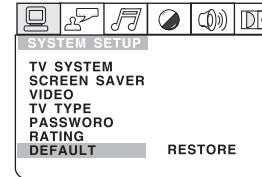


LANGUAGE SETUP

The language setup options are illustrated below:

 
- Highlight the **OSD LANGUAGE** option, and press **◀▶▶▶** buttons to choose the OSD language you prefer, press **ENTER** to confirm, and it will display OSD in that language.

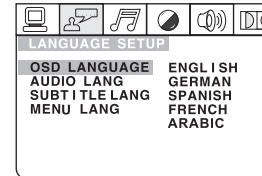

 - Highlight the **AUDIO LANG** option, and press **◀▶▶▶** buttons to choose the audio language you prefer. Press **ENTER** to confirm, if the disc you are playing has that language available, it will output audio in that language.

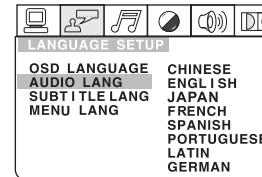

 
- Highlight the **SUBTITLE LANG** option, and press **◀▶▶▶** buttons to choose the subtitle language you prefer. Press **ENTER** to confirm, if the disc you are playing has that language available, it will output subtitle in that language.

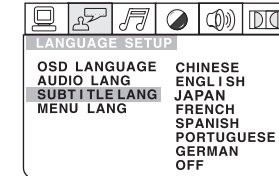

- Highlight the **MENU LANG** option, and press **◀▶▶▶** buttons to choose the subtitle language you prefer. Press **ENTER** to confirm, if the disc you are playing has that language available, it will output menu in that language.

Notes:

 
If your preferred language isn't available, the disc's default language will be played.

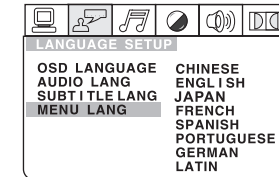

♥ Audio Output


Dolby Audio Setup

 Press the Up and Down Buttons to choose the Dolby Audio mode, then press "Enter" Button to confirm, and plug the Audio cable into the Coaxial port.

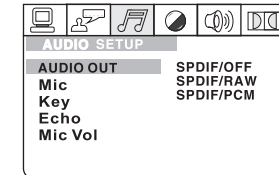

♥ MIC

 Use the UP and DOWN buttons to open and close Mic.

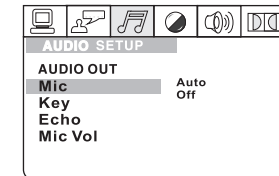


System setup

♥ TV SYSTEM

According to the Color System of the TV, you can choose the TV System.

 
- **AUTO:** Choose this settings if your DVD player is connected to a multi-system TV.
- **NTSC:** Choose this settings if your DVD player is connected to a NTSC TV.
PAL: Choose this settings if your DVD player is connected to a PAL TV.
- **PAL60:** Choose this settings if your DVD player is connected to a PAL60 TV.

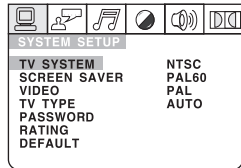

♥ SCREEN SAVER


If the screen saver is on, when your DVD player is in Stop, open or no disc state, or there is a frame frozen for more than 60sec, the screen saver will be displayed. This feature can protect the screen from damage.

 - **ON:** Choose this setting to activate the screen saver.
- **OFF:** Choose this setting to cancel the screen saver. The default setting is ON.

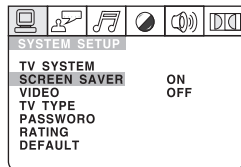

♥ VIDEO

 - **INTERLACE- YUV:** Choose this setting if your DVD player is connected to a TV with Y, Cb, Cr video cables.
- **P-SCAN:** Choose this setting if your DVD player is connected to a progressive scan TV with Y, Cb, Cr video cables.

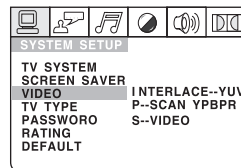


♥ TV TYPE

- **16:9(Wide Screen):** Choose this setting if you DVD player connected to a wide screen TV. If you this setting and you


don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.

 - **4:3LB(Letter Box):** Choosing this setting if your DVD player is connected to a normal ratio TV. Connector You'll see the movies in the original aspect ratio. You'll see the entire frame of the movie might appear with black bars at the top and bottom of the screen.
- **4:3PS(Pan & Scan):** Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to entire screen of your TV. This might mean that parts of the picture (the left and right edges)won't be seen.

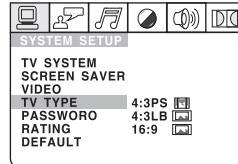

♥ PASSWORD

 The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 9999, then press ENTER to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number(this your password).

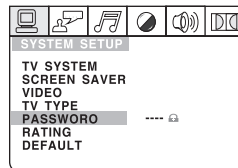


♥ RATING

The rating feature is arating limit system, like movie ratings. It works with DVD discs that have been as signed a rating. This helps you control the types of DVDs that your family watches.

- There are two rating options: NO ADULT and KID SAFE
- Select the **VIEW ALL** option to cancel the rating limit. The default setting is **VIEW ALL**.

 Notes: ● If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option unlocked

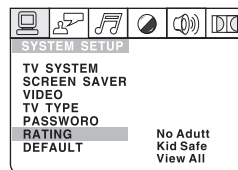

Basic operations

8. Using the Repeat Feature

While a disc playing, press **Repeat** button once, and the repeat banner appears to show current repeat mode.

- In **SVCD/VCD/VCD/CD/MP3/JPEG** sequence playback mode, press **REPEAT** button again on the remote to turn on repeat mode. press **REPEAT** button again to turn to the next repeat mode. There are three repeat options; Off, Track Repeat and Disc Repeat. If you press the button four times, repeat mode cycles back to Off.
- In DVD playback, press **REPEAT** button again to turn on repeat mode. There are three repeat options: Off, Chapter repeat and Title Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.

- Loading and playing **VCDS**.

Press **OSD** button first time:



Press **OSD** button for the again, the display menu fades out.

10. Using the Search Feature

- You can use Search feature to select a title /track/chapter number or go to a specific point in a title. Firstly, Press **GOTO** button on the remote controller to bring up the search menu and enter the edit state; Secondly, press **Left/Right** buttons to highlight the title/chapter/track number or the time option; Thirdly, use Numeric buttons to enter the title/ chapter/ track you want to play or the elapsed time you want to go to in that title; At last, press **ENTER** button to start playback.

 
● Notes:

- + This feature does not work in program play mode.
- + If **PBC** is on, it will turn off automatically when Search playing starts.
- + when playing **MP3/JPEG** disc, Search Feature for chapter only.


9. Using the OSD Feature

- Loading and playing **DVDs**.

Press **OSD** button first time;

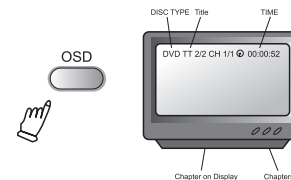

For second time press **OSD** key:

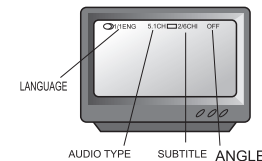 

Press **OSD** button for the third time, the display menu fades out.

11. Changing the Audio

- During disc playback, press **AUDIO** button once, and the audio language info banner appears.
- When a DVD or SVCD is recorded with multiple soundtracks, you can use the language feature to temporarily changes the audio language.

12.Subtitles(compatible with DVD or SVCD)

Press the **SUBTITLE** button on the remote once, and the subtitle info banner appears.

- When a DVD or SVCD is recorded with sub-titles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display **SUBTOFF**.
- To display subtitles, press the **SUBTITLE** button again. The default language with its corresponding serial number will be display in the info banner and subtitles will be display in that language.

Basic operations

13. Changing the Camera Angle

(Compatible with DVD discs)

- During disc playback, press **ANGLE** button and the angle icon appears.
- Some DVDs contain multiple angles of a particular scene or sequence, so you can use the angle feature to view.



14. Changing the TV System

- Press **N/P** button to display current TV system



15. Mute the audio output

- Press **MUTE** button to mute audio output.



16. Zoom in the video image

- Press **ZOOM** button to activate the function and choose the required zoom factor: Zoom2, Zoom3, Zoom4, Zoom1/2, Zoom1/3, Zoom1/4, Zoom off.



- Use the **◀▶▶▶** buttons to pan across the screen when the zoom factor is 2/3/4.

17. Changing the Soundtrack

- Press **L/R** button to display current soundtrack .



18. Repeat a specific segment on the disc that you define.

- Press **A-B** button first time:



- Press **A-B** button again:



- Press **A-B** button third times will to cancel **A-B** loop mode.

 
Basic operations

19. Volume control

- You can press the Volume button on the front of TV set or the amplifier to control the sound level.
- Pressing the **VOL+** button on the remote allow you to amplify the sound level; Press **-ing VOL-** button will reduce the sound level
- **Notes:**
During DVD PCM output playback ,this feature does not work.

20. Playing ,MP3 and JPEG discs

Place a MP3/JPEG disc into the tray, and the player will auto search the directories saved MP3/JPEG files. After searching, it will auto go to the first directory saved MP3 files (to the disc containing both mp3 and jpeg files; to the disc containing single type of files, it will auto go to the first directory) and play the first song in the directory ("01" is highlight ed).The screen displays as the picture below;

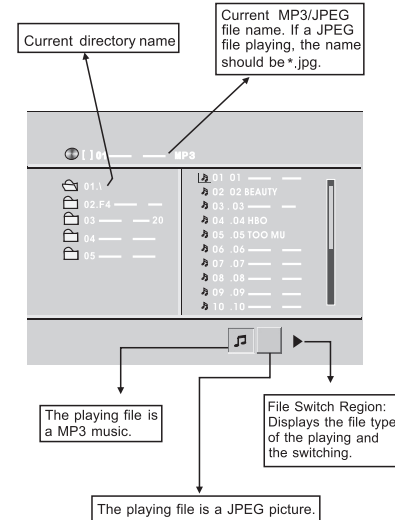

- Use the **◀▶▶▶** buttons to enter the Directory Region and highlight the desired directory, then the first track under it starts playback; Also you can use the **◀▶▶▶** buttons to enter the file region and select the file you want to play.
- **Notes:**
 - + Press the **▶▶▶▶** buttons , you can activate directory region ,File region and file switch region separately.
 - + The highlight in directory region and is shown as the picture above; While it appears a transparent rectangle in file switch region.
 - + In file switch region, you can press the buttons to switch the highlight, then press **▶▶▶▶** **ENTER**; the " M " , " P " , " G " button is illustrated in the above picture. For example, if a disc with MP3 and JPEG files but without any NES files is loaded, the color of the letter " M " and " P " will appear to white and " G " black. If a MP3 file playing , " M " turns darker.
- To the disc with MP3 and JPEG files, when playing a JPEG picture, press the **RETURN** button to return to JPEG list.
- You can press the Numeric buttons to select the file you want to play. For example, if you desire the 15 track in current list, press the **"10+"** button once then press **"5"** button, the 15 starts playback.
Notes: When playing a disc with MP3 file, video cannot be output while only digital audio can.
- When playing JPEG pictures, press the **PROGRAM** button to choose the pictures switched mode. There are 17 switch modes Press **PROGRAM** repeatedly to activate the function and choose the required switch mode: Spread from Up to Down , Spread from Down to Left, Spread from Left to Right, Spread from Right to Left, Spread from Left up to Right down, Spread from Right up to left down , Spread from Left down to Right up , Spread from Right down to Left up, Spread from Center ,to UP /DOWN, Fold from Up/Down to Center, Fold from Left/ Right to Center, Horizontal Shutter, Vertical Shutter, Fold from the Corners to the Center, Random Play , Off.
- When a picture playing or pausing , press the **◀▶▶▶** buttons to change the display angle:
 - ▲ : flip vertical
 - ▼ : flip horizontal
 - ◀ : rotate 90 counter-clockwise
 - ▶ : rotate 90 clockwise
- When a picture playing or pausing, press the **MENU** button, the screen displays small pictures Up to 12 small pictures are displayed per screen To view the next 12 pictures, press the **NEXT** button to go forward and the **PREV** button to go to the previous page. You can also select and play a picture in full screen by press that number on the remote.

