



**ELECTRONIC
MUSICAL SYSTEM**

IBL TY60M2B

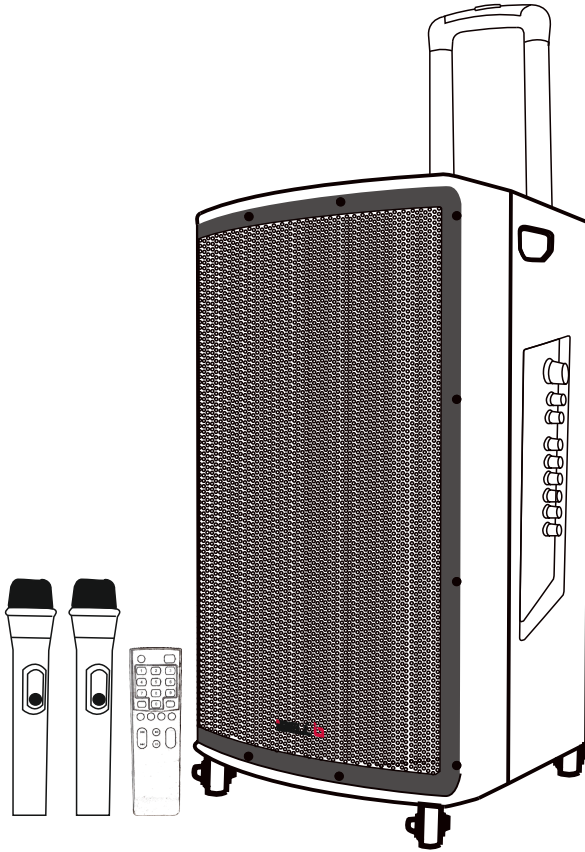

USER GUIDE

Read the manual carefully before use

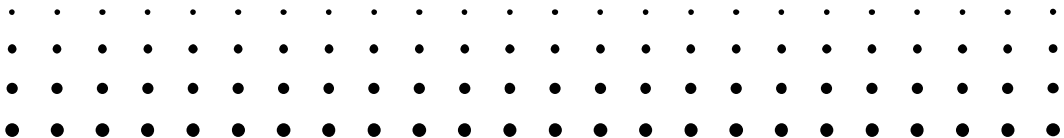

Welcome to buying our products

Dear Customer,

It takes the pride to congratulate you on your purchase, we welcome you to the revolutionary world of technology. You have made the right choice by selecting product that has steered in to the minds of millions for its quality and performance for the last two decades. We have engineered entirely new approach in the product creation that delivers incredibly accuracy in the quality and reliability of the products you buy.

From the onset of the product development, each minute part has been thoroughly tested and experimented in order to provide ultimate customer satisfaction. Our goal is to bring cutting edge technology to your every day life with a focus on the future. Click to way, Set your expectation free, and see what is leads you. Rest assured. Please spare few minutes to go through this manual carefully before using the product in order to enjoy maximum pleasure or using this product.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



- 1. Protection of electric power supply line:** Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
 - 2. Ventilation:** This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
 - 3. Casing Dismantling:** DO NOT dismantle the case. If one touches the inner components, he will probably get serious electric shock.
 - 4. Unusual smell:** When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.
- Attention:** This set applies to AC 110V~240V/50Hz~60Hz power supply. Use standard power supply. Do not use power supply of small output and unsteady voltage.

1-1 PRODUCT FEATURES

1. New design speaker
2. High output power amplifier design, the treble is clear, natural and bass is powerful.
3. With Karaoke function.
4. With USB/SD card reader function, can play Mp3 song freely.
5. With FM radio, can automatically search and memory FM station.

2-1 PRODUCT EQUIPMENT LIST

Main speaker..... 1PCS
User Manual..... 1PCS
Remote control..... 1PC

3-1 PANEL FUNCTION OPERATION INSTRUCTION

- 1. VOLUME:** master volume adjustment
- 2. BASS:** bass volume adjustment.
- 3. TREBLE:** treble volume adjustment.
- 4. MIC.VOL.:** MIC-1&MIC-2 Microphone volume adjustment.
- 5. ECHO:** MIC-1&MIC-2 Microphone echo adjustment.
- 6. MIC :** microphone input

4-1 FUNCTION OPERATION INSTRUCTION

1. **INPUT:** DVD/VCD/CD/TAPE/COMPUTER/MP3 etc. 2.0CH audio signal input socket;
2. **SPEAKER OUTPUT:** satellite channel audio signal output socket, connect to satellite speaker;
3. **POWER:** Power switch ON/OFF switch.

If you don't use speaker long time, you have to turn off power on back panel. Otherwise it is easy to damage speaker and waster electric power.

5-1 USB PANEL FUNCTION OPERATION INSTRUCTION

● USB/SD CARD READER FUNCTION OPERATION INSTRUCTION

1. **MODE:** Input selection key. Press MODE key to select USB input mode.
2. **SD CARD:** SD card reader socket; **3. USB:** USB socket;
4. **▶|| / PLAY:** Press ▶|| key to play USB/SD, press ▶|| key again to PAUSE mode;
5. **◀◀ ▶▶ And VOL-/VOL+ :** This is multi function keys, press this key 1 second to select previous or next Mp3 song. Press this keys more than 2 seconds into increase or decrease playing USB/SD CARD volume.

● FM RADIO FUNCTION OPERATEION INSTRUCTION

1. **MODE:** This is audio input selection key. Press MODE key to select FM radio input mode.
2. **▶|| (SCAN):** In FM mode, Press ▶|| (SCAN) key to search FM station and memory all FM station automatically.
3. **CH-/CH+:** press CH-/CH+ to select FM station RREVIOUS or NEXT one by one

6-1 REMOTE CONTROL FUNCTION OPERATION INSTRUCTION

USB/SD CARD function operation instruction

1. **MODE:** audio input select key, Press mode key to select USB/SD input mode ;
2. **⊘ :** MUTE function key, press this key to turn ON/OFF mute mode.
3. **◀◀/▶▶:** Press ◀◀/▶▶ to select MP3 song rearward or onward one by one;
4. **▶|| :** in USB/SD input mode, Press ▶|| to play USB or SD card , press▶|| again to PAUSE ;
5. **VOL-/VOL+ :** USB/SD volume keys, press these 2 keys to adjust USB/SD volume.
6. **0, 1,9, 100+ NUMBER keys:** press these number keys to select Mp3 song .
7. **RPT:** Press RPT one time into repeat one mode; Press REPEAT two times into repeat all mode; Press REPEAT three times to exit repeat mode and into Random play mode;

FM radio function operation instruction

1. **MODE:** audio input selection key, Press mode key to select FM input ;
2. **⊘ :** MUTE function key, press this key to turn ON/OFF mute mode.
3. **SCAN:** press SCAN to search and memory all FM station automatically.
5. **▶|| :** press ▶|| to select FM station one by one.
6. **◀◀/▶▶:** press◀◀/▶▶ to automatically search FM station one by one.

7-1 USE INSTRUCTION

***CONNECT AUX (DVD/VCD/CD/TAPE/MP3 etc. PLAYER) AUDIO INPUT**

1. Connect RCA signal cable according to the back panel connection instruction: AUX (DVD/VCD/CD/TAPE/MP3 etc. Player) audio L/R output socket connect to the input L/R socket by RCA cable correctly.
2. Insert electric source cable, turn on the power switch button.
3. Press MODE key on USB panel, and select AUX input mode;
4. Adjust function knobs on front panel to your satisfied best sound effect.

***PLAY USB/SD CARD**

1. Insert USB device or SD card that stored MP3 format songs to USB or SD card reader socket;
2. Insert electric source cable, turn on the power switch button.
3. Press MODE key on USB panel, and select USB input mode;
4. Adjust function keys on USB panel and function knobs on front panel to your satisfied best sound effect.
5. USB/SD card operation, pls see USB/SD CARD function operation instruction in user manual.
6. When you use USB or SD card device to play Mp3 song, you want to take out USB/SD card device. You should stop or power off speaker before you take out USB/SD card device, avoid to USB/SD card device damage;

***PLAY FM RADIO**

1. Insert electric source cable, turn on the power switch button.
2. Press MODE key on USB panel, and select FM input mode;
3. Adjust function keys on USB panel and function knobs on front panel to your satisfied best sound effect.
4. If FM signal is not good in the room and you can not search FM station, You can connect metal cable on the FM antenna, and put another terminal of metal cable at outdoor, it can help you search FM station. But you should take care and avoid in lightning strike area.
5. FM radio operation, pls see FM radio function operation instruction in user manual.

***KARAOKE AND MICROPHONE FUNCTION OPERATION INSTRUCTION**

1. Insert microphone into MIC1/MIC2 socket on the panel, and turn on microphone, and adjust echo and microphone volume properly, and you can sing and speak freely by microphone ;
2. ECHO KNOB : Turn ECHO KNOB to adjust microphone ECHO volume;
3. MIC.VOL. KNOB : Turn MIC.VOL. KNOB to adjust MICROPHONE volume;
4. Don't use microphone toward speaker or near speaker, avoid to squeal sound and damage speaker.
5. Turn off microphone and take out microphone from MIC socket, when you do not use microphone.

8-1 TROUBLE SHOOTING

Symptom	Possible Problem	Solution
No Function Light & No Sound	1.Plug is not well connected	Insert the plug into electric outlet
	2.Speaker power button is not turned on	Turn on the button
Function Light on but No Sound	1.Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack.
	2.Satellite speakers and subwoofer are not connected or misconnected	Power off, then check and confirm the cable connection again
	3.Audio signal is not transmitted to subwoofer	Check all the speakers if there is audio signal output
If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assume no responsibility.		