

**iBELL<sup>®</sup>** 

**IBL 2871TS**

**INSTRUCTION MANUAL**



**TOWER  
SPEAKER**

**Read the manual carefully before use**



## SAFETY PRECAUTION



### WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

\*Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

No naked flame sources, such as lighted candles, should be placed on the apparatus; Attention should be drawn to the environmental aspects of battery disposal. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## IMPORTANT SAFETY INSTRUCTIONS

 
- 1) Read these instructions before using the product.
- 2) Read all warnings carefully.
- 3) Follow all instructions carefully.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7) Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Protect the power cord from being waded on or pinched particularly at plug points and the point where they exit from the unit.
- 9) Only use attachments/accessories specified by the manufacturer.
- 10) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, be cautious while moving the cart/unit combination to avoid injury from tip-over.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.



## PACKING LIST

|                       |         |
|-----------------------|---------|
| 1. Subwoofer          | 1 unit  |
| 2. Satellite Speakers | 2 units |
| 3. User Manual        | 1 unit  |
| 4. Remote Control     | 1 unit  |
| 5. AV cable           | 1 unit  |
| 6. FM cable           | 1 unit  |


## SYSTEM CONNECTION DIAGRAM

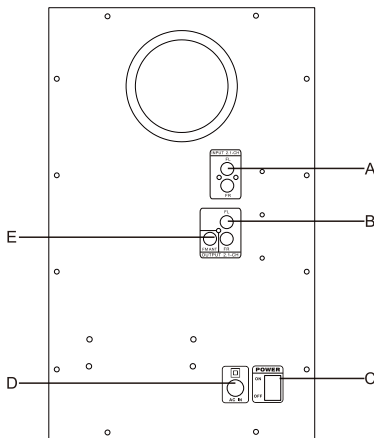

- A. STEREO INPUT  
RCA Connectors to take input from external audio source
- B. STEREO OUTPUT  
Front Left & Front Right & Centre
- C. POWER ON/OFF switch
- D. POWER INPUT  
AC220V/50Hz
- E. FM Antenna

\*Manual is only for reference, take practically according factual machine

## SYSTEM CONNECTION DIAGRAM

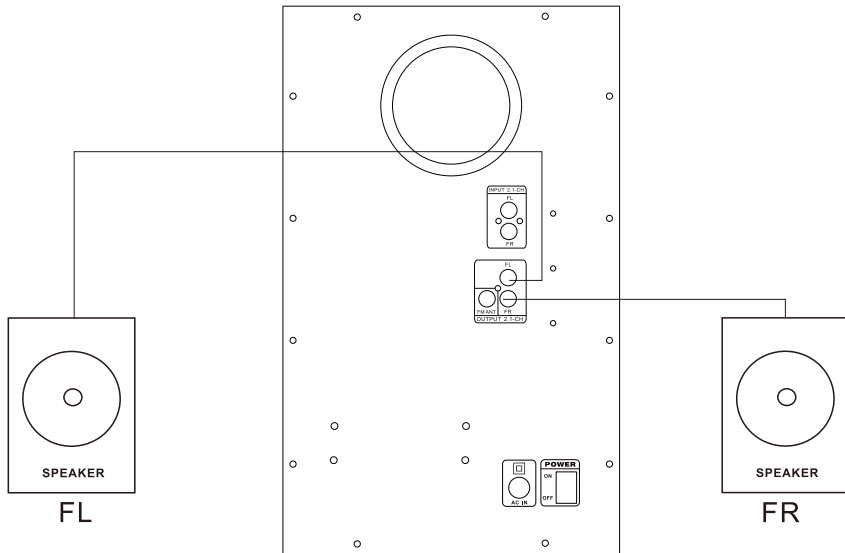 

### UNIT OPERATION

- 1.) First plug the cable of the satellite into the output jack on the rear panel of the woofer, one end of the audio card into the input jack on the rear panel, the other end into the output jack of the computer or any external audio source, the power cord into the power plug socket. Then switch on the unit, the unit starts to play and the default mode is AUX mode, if USB or SD/MMC slots have no memory connected.
- 2.) When inserted a USB or SD/MMC card, it will play from the device last inserted,
- 3.) When USB or SD/MMC card is working, press the PLAY/PAUSE button to pause the music, press the PLAY/PAUSE button again to resume music.
- 4.) When USB or SD/MMC card is playing, press the MODE button to cycle through the LINE IN, USB /SD/MMC card, Blue Tooth , FM mode.
- 5.) When USB or SD/MMC card is working, press the PREV and NEXT button to choose the previous or the next song; Press VOL- and VOL+ button to adjust the volume.
- 6.) After stop using the unit, turn off the power switch, unplug the power cord.

### FEATURES

- Analog audio input.
- Support USB, SD/MMC card music player in Mp3 file format
- Full function remote control.
- Stereo FM radio.
- Built in 3 channel power amplifier.
- Compatible with MP3, WMA etc.
- Aux in function
- Blue Tooth function
- Rating: 220V/50Hz

 
 
## AC POWER

### IMPORTANT NOTES

- Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard; Never use a power cord after it has been damaged.


## BATTERY INSTALLATION

- 1) Open the battery case.
  - 2) Insert one battery without the polarity reversed.
  - 3) Close the battery case.
  - 4) Keep within 5 meter range, 30 degree angle while aiming at the unit.
- Precautionary note:  
Remove the battery when the unit is not being used for a long period of time.

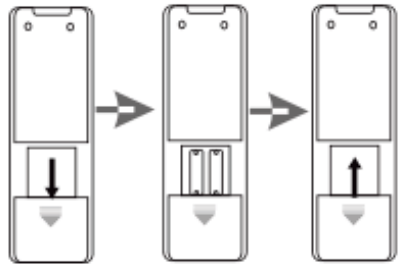

## DESCRIPTION OF THE REMOTE CONTROL

 - 1) MODE : cycle selection input AUX → BLUETOOTH → SD / MMC → USB → FM.
- 2) EQUALIZER: From EQ1 to EQ4, the order normal, heavy bass, treble, classic.
- 3) NEXT : to select the next song in USB / Memory card or to select previous channel in radio station.
- 4) PREV : to select the previous song in USB / Memory card or to select next channel in radio station.
- 5) VOL+ : to increase the overall volume.
- 6) VOL- : to decrease the overall volume.
- 7) 100+ : to select and play the music track present after the 100 tracks the current track.
- 8) PLAY / PAUSE : to play / pause in USB / Memory card, Long press " PLAY/PAUSE " for 3 seconds to search and save channels automatically in radio station, 20 channels can be saved up at most.
- 9) BASS/TRE + : to increase the Bass/Treble volume.
- 10) BASS/TRE - : to decrease the Bass/Treble volume.
- 11) REPEAT : Repeat all is the default mode for the player, once you press the REPEAT button it will repeat the current song.
- 12) NUMBER KEY : to select direct in USB / Memory card, to select 10 digits above by pressing continuously.

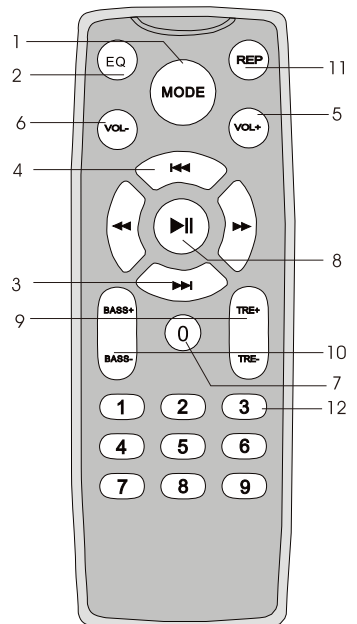

**iBELL<sup>®</sup>**   
[www.ibellsworld.com](http://www.ibellsworld.com)