




**IBL SM 1515
PRESS GRILL SANDWICH MAKER**

220-240V~50Hz/750W

INSTRUCTION MANUAL

Please read carefully before use and keep for future reference

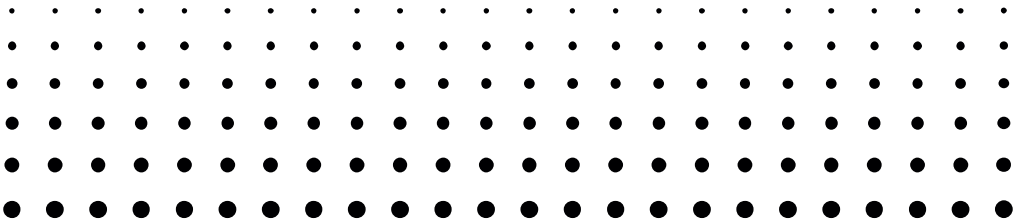

Read all instructions before operating and save for future reference

1. This appliance is for household use only. Do not use this appliance for other than its intended use .Do not use outdoors.
2. Do not leave the appliance unattended when in use .Young children or infirm persons should be supervised to ensure that they do not play with or misuse the appliance.
3. Do not touch hot surfaces, use the handle to lift the top plate.
4. Always use the Grill on a dry level surface.
5. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
6. When using this appliance, provide adequate air space above and on all sides for circulation.
7. On surfaces where heat may cause a problem, an insulating mat is recommended.
8. Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
9. Do not immerse cord, plug or appliance in water or any other liquid.
10. Always turn the power off at the power outlet and then remove the plug before attempting to move the appliance is not in use and before cleaning or storing.
11. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
12. Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorized service centre for examination, replacement or repair.
13. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safely switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Remove any promotional materials and packaging materials before use. Check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth.

TO use as a Grill

1. Insert the plug into a 230/240V power outlet and switch ON. The Red power “On” light and the green light will illuminate .
2. Allow the Grill & Sandwich press to preheat until the green “Ready” light illuminates.
3. Place meat or foods to be cooked on the bottom cooking plate. Refer to Grilling recipes or guide for cooking times.
4. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the food. The top plate must be fully lowered to achieve Grill marks on the selected foods.
5. When the selected foods are grilled, open the lid. Remove the food with the help of a plastic spatula

To use as a Sandwich Press

1. Insert the plug into a 230/240V power outlet and switch ON. The Red power “On” light and the green light will illuminate .
2. Allow the Grill & Sandwich Press to preheat until the green “Ready” light illuminates.
3. During this time, prepare the sandwich and place it onto the bottom cooking plate. Always place sandwiches towards the rear of the bottom cooking plate.
4. Close the top cooking plate which has a floating hinge that is designed to evenly press down on the sandwich. The top plate must be fully lowered to cook sandwiches.
5. Toasting should take approximately 4-5minutes. Exact toasting time will be a matter of taste. It will also depend on the type of bread and filling used.
6. When the sandwich is cooked use the handle to open the lid. Remove the sandwich with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.

Care and cleaning

Before cleaning, turn the power off at the power outlet and then remove the plug. Allow your grill & sandwich press to cool before cleaning. The unit is easier to clean when slightly warm. Always clean when your grill & sandwich press after each use to prevent a build up of baked-on foods. Wipe cooking plates with a soft to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.

Cleaning the drip tray

Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface.

Rinse and dry thoroughly with a clean, soft cloth and replace.

Storage

To store your grill & sandwich press

1. Switch off the appliance and unplug from the power outlet.
2. Allow the grill to fully cool.
3. Slide the storage clip towards the front handle to the LOCK position so that the top and bottom cooking plates are locked together.
4. Click the removable drip tray into place.
5. wrap the cord in the cord storage area below the unit
6. Store on a flat, dry level surface.

iBELL[®] 
Complete Home Solution